

advanced FLOW engineering™


252 Granite St. Corona, CA 92879 Support: 951-493-7100 aFepower.com

Intake kit Installation Instructions: 2004-2005 BMW E60 525i/530i L6-2.5L/3.0L

						200 3231,3331 20 2.32,3	
Kit Part51#/54	-11572		Tools Required Parts List			ist	Т
Make	BMW		5/16 nut driver 1/4 nut driver	1		Air filter (⊮N: 24-91054 Pro-5R ™ or 21-91054 Pro-Dry S ™)	
26 1 2			Flat head screwdriver	1		Housing	
Model	Year	Engine	10mm socket or wrench	1 1		Tube	1
E60 525i	04	-L60-52.5L	Ratchet w/extension	1		7/16 trim seal @ 23 L	L
E60 530i	04	-L60-53.0L	T25 torx bit	1		Adaptor, 6 filter	4
			T30 torx bit	4		Screw, M6 x1 x 25	
				4		Washer, flat M6	
				1		Gasket, MAS	
				2		Screw, #8-32 x 5/8 L	1
				1	=	Gasket, tube	С











Disconnect MAF sensor. Loosen clamp on air box Unclip upper half of airbox to remove lid and



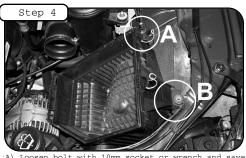

:A) Loosen bolt with 10mm socket or wrench and save for Carefully remove MAF sensor using T25 torx bi (See step 1B). Loosen Torx bolt with T30 torx bit: Remc box out of vehicle.

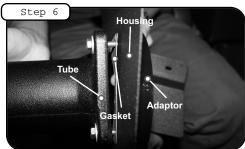










Using the 4 hex screws w/washers provided, attach tube Install MAF sensor using gasket and #8-32 screwsoperem and remove bolt holding in washer reserAttach trim seal to housing. Install housing i:Secure housing using bolt from step 8 and tighten ket and adaptor through homakengure gasket is between vided. Tighten using flat head screwdriver. with 10mm socket or wrench. Save bolt for late and position. 10mm socket or wrench. tube and housihighten using 10mm socket or wrench. (See step 10).

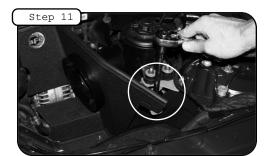

10mm socket or wrench.



tighten clamp using 1/4 n@bndmeivteMAF sensor harness.





With bolt from step 4A, tighten down housing u:Attach stock tube to Hunklaksetock tube, hold, and not stall air filter and tighten using 5/16 nut Whomiveimstallation is now complete. Please check all clamps and hoses periodically and tighten. Thank you for choosing aFe!